

# **DISC MAKERS®**

## *ReflexPro Quick Start Guide*



### **BASIC OPERATION**

*This side of the Quick Start Guide has basic instructions for duplicating CDs from the ReflexPro's 80 GB internal hard drive. The opposite side of this guide has basic instructions for duplicating "Disc-to-Disc," which is copying CDs from a master CD placed in the unit's top drive. For more detailed instructions on the ReflexPro's duplicating operations, please refer to the User's Guide on the attached CD.*

### **DUPLICATING A CD-R USING THE INTERNAL HARD DRIVE**

The ReflexPro duplicates in two different modes – Hard Drive-to-Disc mode, and Disc-To-Disc mode. The Hard Drive-to-Disc mode copies the CD master to the unit's hard drive, and then duplicates the data to each blank CD-R placed in the writer drives. This ensures an exact copy of the original master to every disc. The Hard Drive-to-Disc mode is very efficient for duplicating large numbers of discs.

- 1** Power on the ReflexPro by pressing the round button at the bottom right on the front of the unit. The system will initialize and perform a self test, which will be displayed on the LCD display area. When the self test is complete,

the image below will appear on the LCD screen:

```
1. Copy          P: A
```

- 2** To copy your CD master to the hard drive, you must use the Image function. To access the Image function, press the DOWN arrow until the LCD screen displays 9. Image. Press the ENT button and the following should appear on the LCD screen:

```
9-01. Image     P: A  
Load
```

- 3** Place your CD master in the top drive and press the ENT button. The master disc will begin to be copied to the hard drive and when completed the LCD screen will read Image Load OK. The letters P: A that are displayed on the screen indicate that your master image has been successfully loaded into the "A" partition of the hard drive. (The internal hard drive of your ReflexPro is broken into smaller parts called "partitions." Each partition can hold one CD image.) Remove your master.

```
9-01. Image     P: A  
Load
```

- 4** Press the ESC button two times until 9.

Image appears in the LCD display. Then use the UP arrow to return to 1. Copy.

- 5** You are now ready to duplicate your CD-Rs. Load the drives with high-quality optical media and press the ENT button and close the drive. The duplication process will begin. (If you wish to duplicate fewer than your unit's full capacity, load the number of CD-Rs you need into the drives and press the ENT button to start the duplication process.) When the duplication process is completed, the ReflexPro will eject the successfully copied discs. When the duplication is complete, the LCD will display:

```
1. Copy          P: A  
OK: 04
```

- 6** Next to OK: will be the number of successfully copied discs. In the screen example above, 4 copies were successfully duplicated.

*Note: When the duplication process is completed, the writer drives will automatically eject the CD-Rs that have been duplicated successfully. The LCD screen will display the number of copies that are OK. If any CD-Rs have not been duplicated successfully, the LCD screen will display the number of copies that have FAILED. The CD-Rs that have not duplicated successfully will remain in their drives until the eject button on the drive is pressed. For information on why a CD-R might not copy successfully, please see the User's Guide on the attached CD.*

## DIRECT DISC TO DISC COPY

The Disc-to-Disc mode will duplicate the CD master that is placed in the ReflexPro's top drive – also called the source (Src) drive – to blank CD-Rs that are loaded into the unit's remaining drives. The ReflexPro has been pre-set to duplicate in the Hard Drive-to-Disc mode, but can easily be set to the Disc-to-Disc mode.

- 1 Power on the ReflexPro by pressing the round button at the bottom right on the front of the unit. The system will initialize and perform a self test, which will be displayed on the LCD display area.
- 2 When the self test is complete, the 1. Copy display will appear on the LCD screen. Press the DOWN arrow until 8. Select Source appears on the display screen.
- 3 Press the ENT button and the following image will appear on the display screen:



```
SRC: HDD
00 IDE0 Master
```

- 4 Press the DOWN arrow once. Src: CD-RW 01 IDE1 master will be displayed on the screen. Press the ENT button and the LCD will display CD-RW selected. Press ENT again.
- 5 Press the UP arrow to return to 1. Copy. You will notice that P: A is no longer displayed on this screen. P: A is only displayed when copying in the Hard Drive-to-Disc mode (see opposite side of this guide).
- 6 To start the duplication process, load the top drive with your CD master. Load the remaining

drives with the number of CD-Rs you wish to duplicate. You can duplicate from one CD-R to as many CD-Rs as the unit can accommodate. For the best results, always use high-quality CD-R media.

- 7 Press the ENT button to begin duplicating. The unit will automatically analyze the master disc (this may take a few seconds), and begin duplicating at the maximum recording speed.
- 8 The LCD will display the copying progress. The screen will display OK: when the duplication

is complete. Next to OK: will be the number of successfully copied discs.

Note: When the duplication process is completed, the writer drives will automatically eject the CD-Rs that have been duplicated successfully. The LCD screen will display the number of copies that are OK. If any CD-Rs have not been duplicated successfully, the LCD screen will display the number of copies that have FAILED. The CD-Rs that have not duplicated successfully will remain in their drives until the eject button on the drive is pressed. For information on why a CD-R might not copy successfully, please see the User's Guide on the attached CD.