

DISC MAKERS®

ReflexPro DVD Quick Start Guide



BASIC OPERATION

This side of the Quick Start Guide has basic instructions for duplicating DVDs from the ReflexPro's 80 GB internal hard drive. The opposite side of this guide has basic instructions for duplicating "Disc-to-Disc," which is copying DVDs from a master DVD placed in the unit's top drive. For more detailed instructions on the ReflexPro's duplicating operations, please refer to the User's Guide on the attached CD. All Reflex DVD Duplicators also duplicate CD-Rs. Follow the same instructions for CD-R duplication.

DUPLICATING A DVD USING THE INTERNAL HARD DRIVE

The ReflexPro duplicates in two different modes – Hard Drive-to-Disc mode, and Disc-To-Disc mode. The Hard Drive-to-Disc mode copies the DVD master to the unit's hard drive, and then duplicates the data to each blank DVD-R or DVD+R placed in the writer drives. This ensures an exact copy of the original master to every disc. The Hard Drive-to-Disc mode is very efficient for duplicating large numbers of discs.

- 1 Power on the ReflexPro by pressing the round button at the bottom right on the front of the unit. The system will initialize and perform a self test, which will be displayed on the LCD display area.

When the self test is complete, the image below will appear on the LCD screen:

```
1. copy P:A
```

- 2 To copy your DVD master to the hard drive, you must use the Image function. To access the Image function, press the DOWN arrow until the LCD screen displays 9. Image. Press the ENT button and the following should appear on the LCD screen:

```
9-01 Load Image P:A
```

- 3 Place your DVD master in the top drive and press the ENT button. The master disc will begin to be copied to the hard drive and the LCD screen will read Image Load OK when completed. The letters P: A that are displayed on the screen indicate that your master image has been successfully loaded into the "A" partition of the hard drive. [The internal hard drive of your ReflexPro is broken into smaller parts called "partitions." Each partition can hold one DVD image.] Remove your master.
- 4 Press the ESC button two times until 9. Image appears in the LCD display. Then use the

UP arrow to return to 1. Copy.

- 5 You are now ready to duplicate your DVDs. Load the drives with high-quality optical media and press the ENT button and close the drives. The duplication process will begin. [If you wish to duplicate fewer than your unit's full capacity, load the number of blank DVDs you need into the drives and press the ENT button to start the duplication process.] When the duplication process is completed, the ReflexPro will eject the successfully copied discs.

```
1. Copy P: A  
OK: 04
```

- 6 Next to OK: will be the number of successfully copied discs. In the screen example above, 4 copies were successfully duplicated.

Note: When the duplication process is completed, the writer drives will automatically eject the DVDs that have been duplicated successfully. The LCD screen will display the number of copies that are OK. If any DVDs have not been duplicated successfully, the LCD screen will display the number of copies that have FAILED. The DVDs that have not duplicated successfully will remain in their drives until the eject button on the drive is pressed. For information on why a DVD might not copy successfully, please see the User's Guide on the attached CD.

DIRECT DISC TO DISC COPY

The Disc-to-Disc mode will duplicate the DVD master that is placed in the ReflexPro's top drive – also called the source (Src) drive – to blank DVD-Rs or DVD+Rs that are loaded into the unit's remaining drives. The ReflexPro has been preset to duplicate in the Hard Drive-to-Disc mode, but can easily be set to the Disc-to-Disc mode.

- 1 Power on the ReflexPro by pressing the round button at the bottom right on the front of the unit. The system will initialize and perform a self test, which will be displayed on the LCD display area.
- 2 When the self test is complete, the 1. Copy display will appear on the LCD screen. Press the DOWN arrow until 8. Select Source appears on the display screen.
- 3 Press the ENT button and the following image will appear on the display screen:



```
SRC: HDD
00 IDE0 Master
```

- 4 Press the DOWN arrow once. Src: DVD-RW 01 IDE1 master will be displayed on the screen. Press the ENT button and the LCD will display DVD-RW selected. Press ENT again.
- 5 Press the UP arrow to return to 1. Copy. You will notice that P: A is no longer displayed on this screen. P: A is only displayed when copying in the Hard Drive-to-Disc mode (see opposite side of this guide).
- 6 To start the duplication process, load the top drive with your DVD master. Load the remaining drives with the number of DVDs you wish to duplicate. You can duplicate from one DVD to as

many DVDs as the unit can accommodate. For the best results, use high-quality media.

- 7 Press the ENT button to begin duplicating. The unit will automatically analyze the master disc (this may take a few seconds), and begin duplicating at the maximum recording speed.
- 8 The LCD will display the copying progress. The screen will display OK: when the duplication is complete. Next to OK: will be the number of

successfully copied discs.

Note: When the duplication process is completed, the writer drives will automatically eject the DVDs that have been duplicated successfully. The LCD screen will display the number of copies that are OK. If any DVDs have not been duplicated successfully, the LCD screen will display the number of copies that have FAILED. The DVDs that have not duplicated successfully will remain in their drives until the eject button on the drive is pressed. For information on why a DVD might not copy successfully, please see the Guide on the attached CD.