

# DISC MAKERS®

## Reflex 1 CD-R Quick Start Guide



### BASIC OPERATION

This Quick Start Guide has basic instructions for duplicating "Disc-to-Disc," which is copying CDs from a master CD placed in the unit's top drive. For more detailed instructions on the Reflex 1 CD's duplicating operations, please refer to the User's Guide on the attached CD.

**1** Power on the Reflex 1 CD-R by pressing the round button located at the bottom right on the front of the unit. The system will initialize and perform a self test, which will be shown on the LCD display.

**2** When the self test is complete, the "1. Copy" display will appear on the LCD screen. Press the **DOWN** arrow until "8. Select Source" appears on the LCD display.

**3** Press the **ENT** button and the following image should appear on the display:

**SRC: CD-ROM  
01 IDE2 Slave**

If so, Hit **ESC** and proceed to step 5.

**4** If not, press the **DOWN** arrow until it displays. "SRC: CD-ROM 01 IDE2 Slave. Press the **ENT** button and the LCD will display **CD-ROM selected!**. Press **ENT** again.

**5** Press the UP arrow until you return to "1. Copy" To start the duplication process, load the top drive with your CD master. Load the bottom, writer drive with blank CD-R / RW media.

**6** Press the **ENT** button to begin duplicating. The Reflex duplicator will automatically analyze the master disc (this may take a few moments), and begin duplicating at the maximum recording speed.

**7** The LCD will display the writing process as it happens. The screen will display "OK:" when the duplication is complete.

*Note: When the duplication process is completed, the writer drive will automatically eject the CD-R / RW that has been duplicated successfully. If the duplication process failed, the CD-R / RW will remain in the drive until the eject button on the drive is pressed. For more information on why a CD-R / RW may not copy, please refer to the User's Guide on the attached CD.*

DISC MAKERS

[www.discmakers.com](http://www.discmakers.com)

888.800.8046

### Basic use of Reflex USB Connect

- 1** Make sure the Reflex and computer are off before beginning.- Connect USB cable to the back of the Reflex and to the computer.
- 2** Push switch on the back of the Reflex unit to the right for USB (towards the USB connector), Turn on computer & Reflex unit, the red led will light.
- 3** Wait 30 sec., Windows system message "Found New Device" may appear during the first time setup.
- 4** The Reflex will appear as a "USB Mass Storage Device". Follow any on-screen instructions for setting up a USB device.
- 5** In Windows Explorer & My Computer, the single bottom writer drive on Reflex1 units will appear as a Compact Disc Drive icon
- 6** The drive is now ready to read and write to using provided software or other authoring software. (Please see software's help for its use)
- 7** To use the Reflex with out a computer, turn off the Reflex only, push the switch to the left (away from the USB connector) Turn the Reflex back on you can now use the Reflex as a standalone duplicating machine.

Filename: Reflex 1 CD QSG  
Directory: Y:\Z\techsupport\manuals\Reflex\QuickStartGuides\Reflex  
Pro  
Template: C:\Documents and Settings\mgonzalez\Application  
Data\Microsoft\Templates\Normal.dot  
Title:  
Subject:  
Author: Vanessa riegel  
Keywords:  
Comments:  
Creation Date: 8/9/2004 5:27 PM  
Change Number: 10  
Last Saved On: 8/11/2004 12:56 PM  
Last Saved By: mwojtasz  
Total Editing Time: 88 Minutes  
Last Printed On: 12/10/2005 4:52 PM  
As of Last Complete Printing  
Number of Pages: 1  
Number of Words: 482 (approx.)  
Number of Characters: 2,218 (approx.)