

QUICK START GUIDE

Disc Makers Reflex10™ DVD±/CD-R



This Quick Start Guide has basic instructions for duplicating DVDs from the Reflex tower's internal hard drive and for duplicating disc-to-disc, which is copying directly from a DVD master disc placed in the top drive. For more detailed instructions on the Reflex tower operation, please refer to the User Guide on the attached CD.

DUPLICATING A DVD USING THE INTERNAL HARD DRIVE

Recommended duplication method

The ReflexMax10 duplicates in two different modes - **Hard Drive-to-Disc** mode, and **Disc-To-Disc** mode. The **Hard Drive-to-Disc** mode copies the Master to the unit's hard drive and then duplicates the data to each blank disc placed in the writer drives. This ensures an exact copy of the original master to every disc. The **Hard Drive-to-Disc** mode is very efficient for duplicating large numbers of discs.

- 1> Power on the ReflexMax10 by pressing the round button at the top right on the front of the unit. The system will initialize and perform a self-test, which will be displayed on the LCD display area. When the self-test is complete, the image below will appear on the LCD screen:

Disc Makers
1. Copy

- 2> To copy your master to the hard drive, press the **LOAD** hot key found underneath the LCD display. Then press the **ENT** button and the following will appear on the LCD screen:

Image
2. Load Partition

- 3> Place your Master in the top drive and press the **ENT** button. You will then be prompted to enter a name for the partition that will be used to store the image of the master. Using the arrow buttons scroll through the alpha-numeric characters and press **ENT** to select. The master disc will load to the hard drive, and when completed, the LCD screen will read **Load Partition OK**. (The internal hard drive of your ReflexMax10 is broken into smaller parts called partitions. Each partition can hold one master image.) Remove your master disc.
- 4> Press the **ESC** button until the LCD display returns to **1. Copy**.

- 5> You are now ready to duplicate your discs. Load and close the drives with high-quality optical media and press the **ENT** button. Select the desired partition you wish to copy from and push **ENT**. If you wish to use a counter to keep track of the number of discs duplicated use the up arrow button to set counter to the number of discs you wish to make and press **ENT**. The duplication process will begin. (If you wish to duplicate fewer than your unit's full capacity, load the number of discs you need into the drives and press the **ENT** button to start the duplication process.) When the duplication process is completed, the ReflexMax10 will eject the successfully copied discs and the LCD will display:

PASS 10 FAIL 0 (10)
Waiting for Blanks

Note: The writer drives will automatically eject the discs that have been duplicated successfully. The LCD screen will display the number of copies that are OK. If any discs have not been duplicated successfully, the LCD screen will display the number of copies that have **FAILED**. The discs that have not duplicated successfully will remain in their drives until the eject button on the drive is pressed. For information on why a disc might not copy successfully, please see the **User Guide** on the attached CD.

DIRECT DISC-TO-DISC COPY

The Disc-to-Disc mode will duplicate the master that is placed in the top drive of the Reflex tower (also called the **Source** drive) to blank discs that are loaded into the unit's remaining drives. The Reflex has been preset to duplicate in the **Hard Drive-to-Disc** mode, but can easily be set to the **Disc-to-Disc** mode.

- 1> The ReflexMax10 duplicates in two different modes - **Hard Drive-to-Disc** mode, and **Disc-To-Disc** mode. The **Hard Drive-to-Disc** mode copies the Master to the unit's hard drive and then duplicates the data to each blank disc placed in the writer drives. This ensures an exact copy of the original master to every disc. The **Hard Drive-to-Disc** mode is very efficient for duplicating large
- 2> Press the **SOURCE** quick key located below the LCD display, then press the **ENT** key.

Please turn over for steps 3-8

QUICK START GUIDE

Disc Makers Reflex 10 DVD±/CD-R[™]

- 3> **Hard Drive Port 0** will be displayed on the screen. Press the **down** arrow button and the LCD will display:

Writer Port 2
(make & model of writer drive)

- 4> Press **ENT** then press the **ESC** button to return to **1. Copy**. To start the duplication process, load the top drive with your master disc. Load the remaining drives with the number of discs you wish to duplicate.
- 5> You can duplicate from one master disc to as many blank discs as the unit can hold. For the best results, always use high-quality recordable media
- 6> Press **ENT** and the display will show **Load and Copy** press the **ENT** button once more. If you wish to use a counter to keep track of the number of

discs duplicated use the up arrow button to set counter to the number of discs you wish to make, then press **ENT**.

- 7> The duplication process will begin. The unit will automatically analyze the master disc (this may take a few seconds), and begin duplicating at the maximum set recording speed. (If less than the maximum number of drives are loaded with blank media the unit will prompt to continue after the last loaded drive is detected.
- 8> The LCD will display the copying progress. The screen will display **OK:** when the duplication is complete. Next to **OK:** will be the number of successfully copied discs.

Note: The writer drives will automatically eject the discs that have been duplicated successfully. The LCD screen will display the number of copies that are OK. If any copies have not been duplicated successfully, the LCD screen will display the number of copies that have FAILED. The discs that have not duplicated successfully will remain in their drives until the eject button on the drive is pressed. For information on why a disc might not copy successfully, please see the Guide on the attached CD.

AFFIX CD HERE