

# QUICK START GUIDE

## Disc Makers Reflex1™ DVD±/CD-R



*This Quick Start Guide has basic instructions for duplicating DVDs disc-to-disc, which is copying directly from a master DVD disc placed in the top drive. The process for duplicating CD-Rs is the same. For more detailed instructions on the Reflex tower operation, please refer to the User Guide on the attached CD.*

### Basic Operation

- 1 > Power on the Reflex by pressing the round button at the bottom right on the front of the unit. The system will initialize and perform a self-test, which will be displayed on the LCD display area. When the self-test is complete, the image below will appear on the LCD screen:

Disc Makers  
1. Copy

- 2 > Open drive drawers by pressing the buttons on drive face. Place master disc in top drive and place the blank disc in bottom drive. Press green **ENT** button on controller face. The controller will display speed choices such as:

Write Speed =  
16 12 8 6 4 2 1

- 3 > The blinking cursor can be moved with the up and down arrows on the controller face, press the green **ENT** to make the desired selection. The controller will display the message below as it begins duplicating.

Write 4464Mbyte  
DVD-R 288 5%

- 4 > Once the duplication is complete the system will eject the completed disc

### Use of the USB connect feature

- 1 > Located at the rear of the Reflex duplicator, you will find the USB connection. Connect the appropriate end of the supplied USB cable to the back of the Reflex and the other end to an open USB port on your computer. Slide the USB on/off switch **DOWN** towards the USB port, this will activate the USB connection (the switch is located just above the USB port on the back of the Reflex duplicator). Turn on the Reflex unit, the red LED will illuminate.


The Reflex will display >>> PC LINK <<<:

>>> PC LINK <<<

- 2 > Wait approximately 30 seconds, Windows will display a message **Found New Device** may appear during the initial setup. The Reflex will appear as a **USB Mass Storage Device**. Follow any on-screen instructions for setting up a USB device. In Windows Explorer & My Computer bottom writer drive will appear as a Compact Disc Drive icon with a new drive letter such as E:\. The drive is now ready to read and write to using provided software or other authoring software. (Please reference your software help section for its use) To use the Reflex with out a computer, turn off the Reflex only, push the switch **Up** (away from the USB connector) Turn the Reflex back on and use the Reflex to Copy as a

# QUICK START GUIDE

# Disc Makers Reflex 1<sup>™</sup>

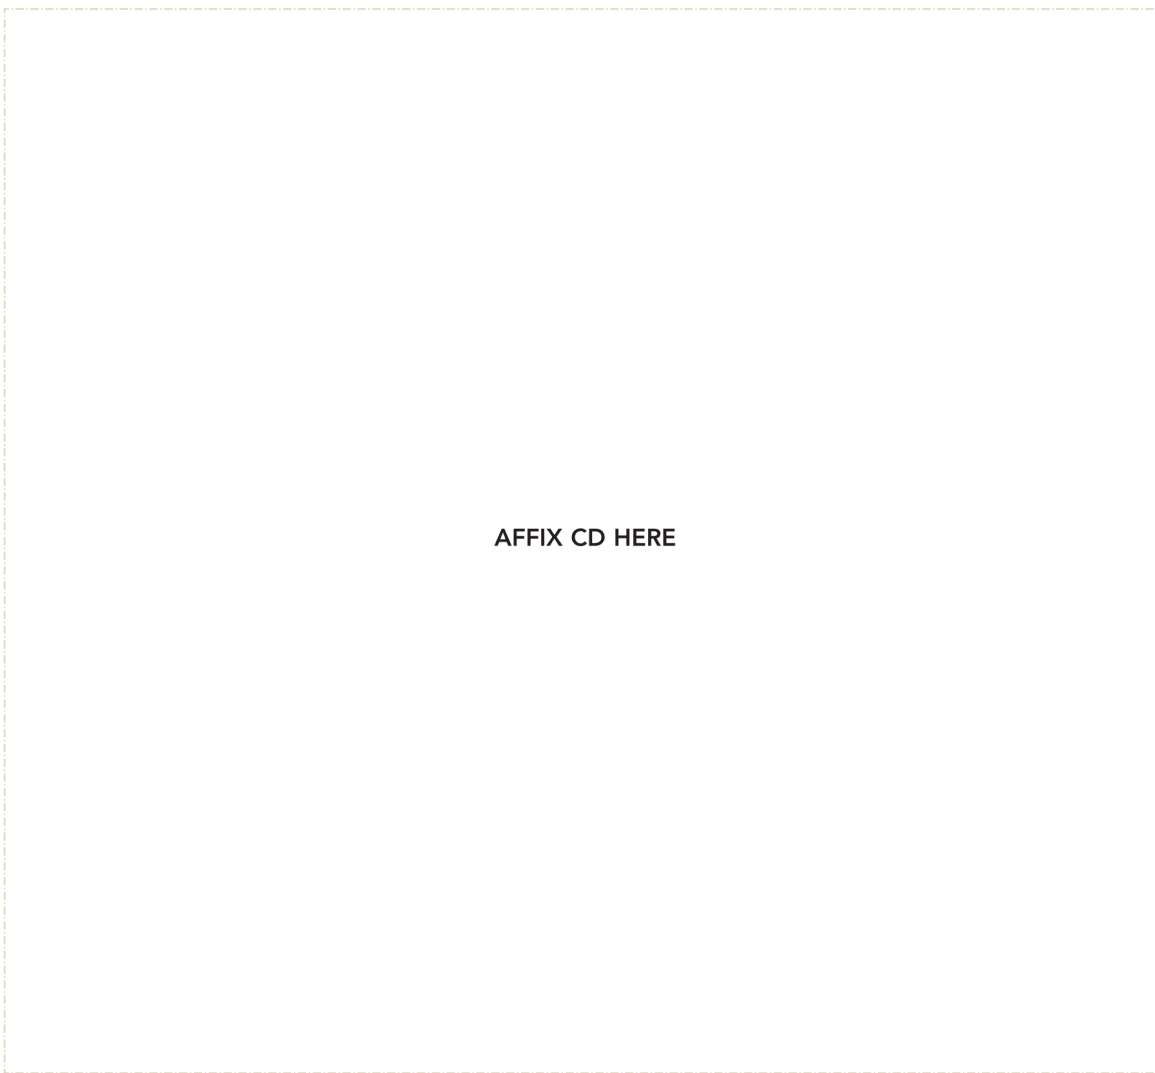

AFFIX CD HERE