




1. Go to your printers control panel.

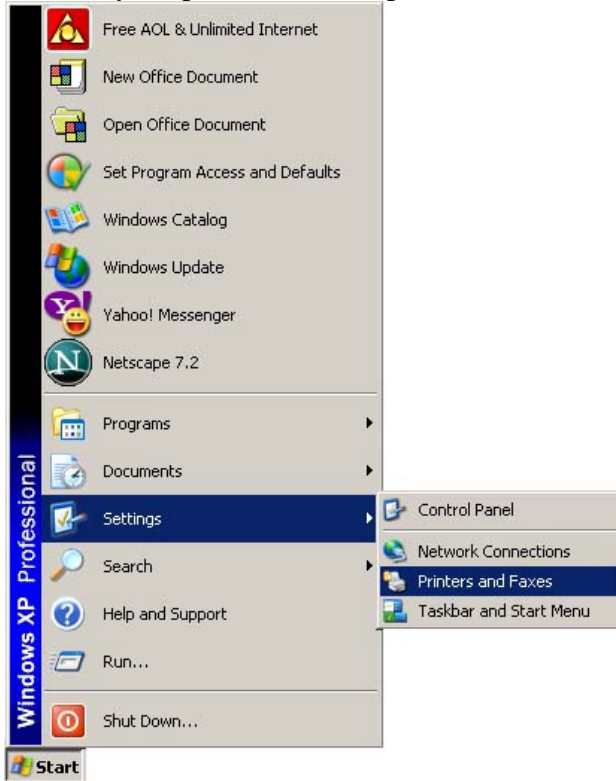


2. Right click on the "CD DVD Printer 6".

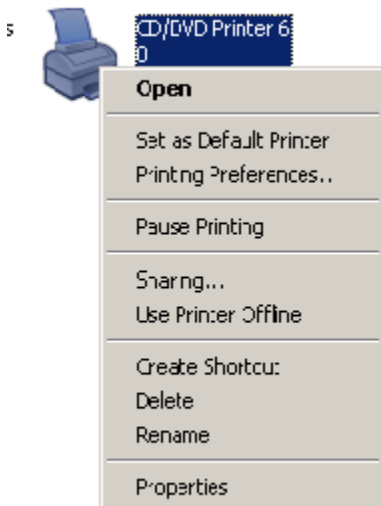


3. Click on the “Calibration” check box and then click on “Centering Disc” and then on Properties.

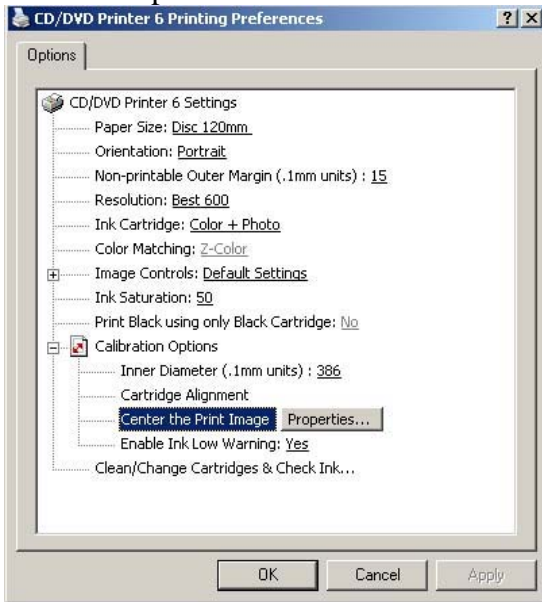

5. You will then see the following screens, follow the on screen directions.

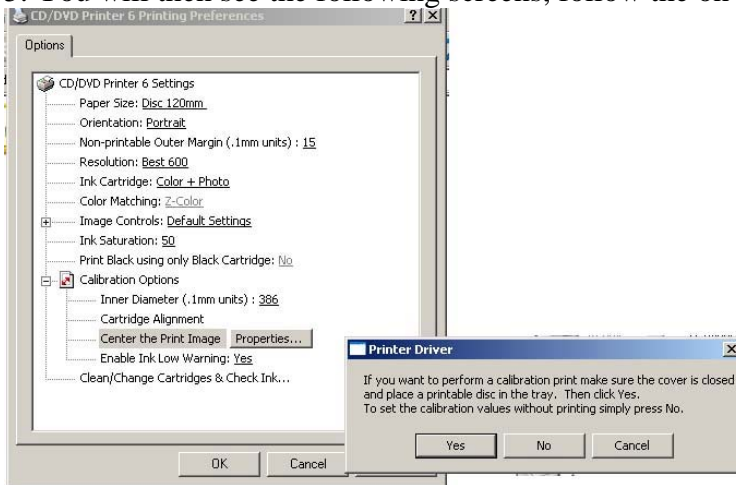

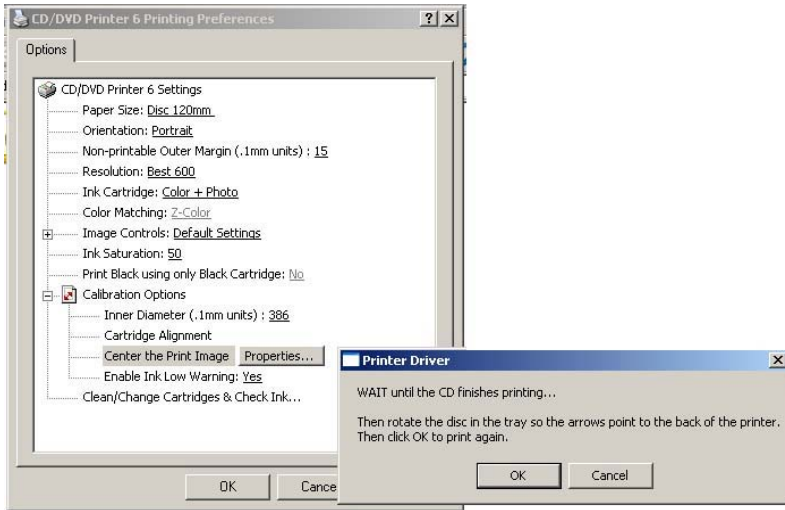

5. After the printer prints the disc, follow the instructions on the screen to complete.

