



To change the burn speed on the Reflex machine:

1. Scroll down to 11. Setup & Press Enter
2. Scroll down to either CD or DVD burn speed & press Enter.

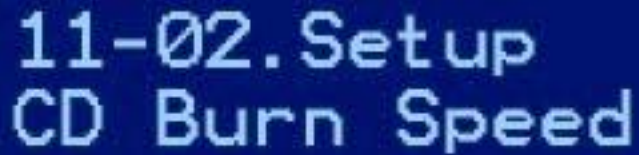

11-02.Setup
CD Burn Speed

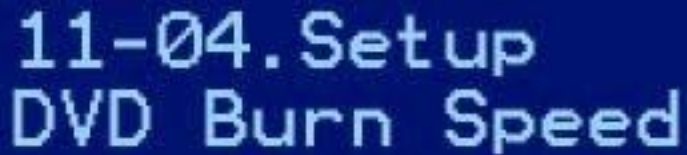

11-04.Setup
DVD Burn Speed

3. Press the up or down arrow keys to select desired burn speed & press Enter.



DVD Burn Speed
Maximum