


To change the read speed on the Reflex machine:

1. Scroll down to 11. Setup & Press Enter
2. Scroll down to Read Speed & press Enter.

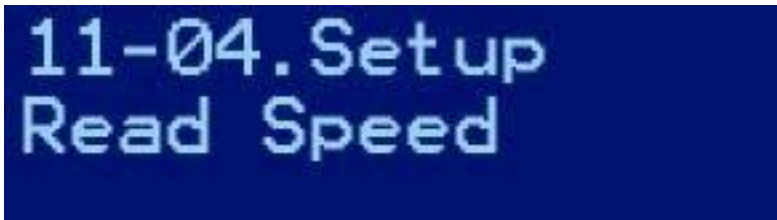

3. Press the up or down arrow keys to select desired read speed & press Enter.

