 
 


1. Press and hold the ESC button until the unit beeps. This will bring you into 12. ADV. SETUP.

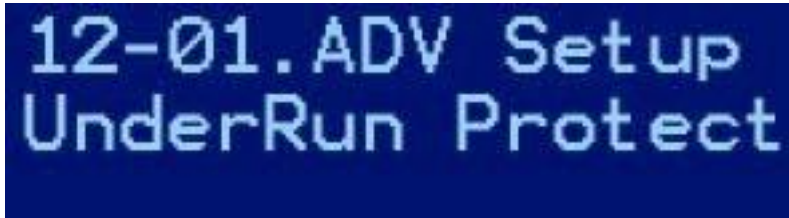

12-01. ADV Setup  
UnderRun Protect

2. Hit the down arrow until you find 12-04. Format HDD...and press ENT.

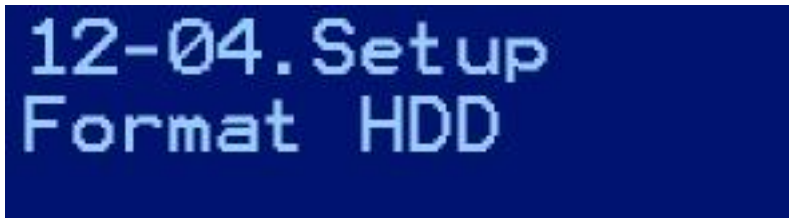

12-04. Setup  
Format HDD

3. Hit the up or down arrows to select what media type you want to format the drive for and then hit ENT  
ex: DL, DVD, CD....

NEEDS PIC....