


LOAD IMAGE ON TO HDD

1. Power on Reflex & insert a master disc into the top drive after booted.

2 Press the down arrow key until you are at "8. Select Source." Press Enter key

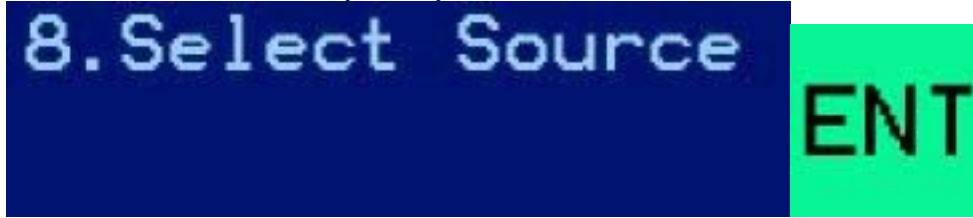

3. Make sure the IDE1 drive (1st drive) is selected as source. Press Enter key



3. Press the Escape key. Press the down arrow key until you are at “9. Image.”




```
9. Image
```

Press Enter key.

4. Press the down arrow key until you are at “Select Image.” Press Enter key.


Select which partition of the hard drive you want to save the image into (the default setting is partition A, & they are labeled alphabetically from there). Press Enter key

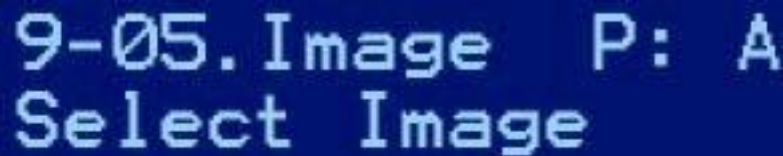

```
9-05. Image P: A  
Select Image
```

to select partition.

5. Press the up arrow key until you are at “9-01 Load.” Press Enter key & master disc should begin loading. “Preparing” followed by “Source Disc Analyzing” will appear until you see the progress of image load.

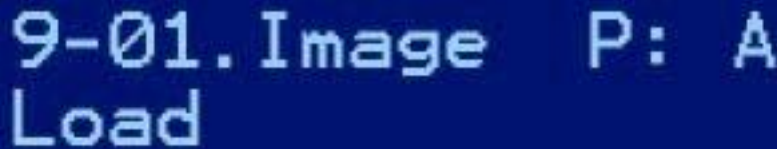

```
9-01. Image P: A  
Load
```